

Studio Sound Electronics


LED / SENSOR KIT

FUNAI / SYMPHONIC / MAGNAVOX

PHILCO / SYLVANIA / PHILIPS

WHITE-WESTINGHOUSE / SEARS

HITACHI

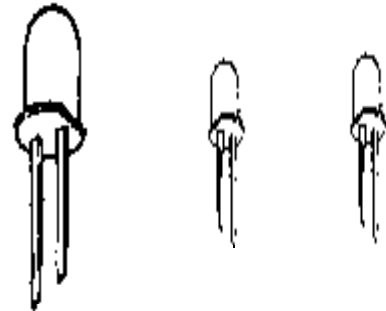

PART NO: MBK-67-IRES

SYMPTOMS: SHUTSDOWN & EJECTS TAPE IN PLAY OR RECORD, OR GOES TO STOP MODE AFTER 10-15 SECONDS. ALSO, MAY TRY TO LOAD CASSETTE TRAY WITHOUT CASSETTE BEING PRESENT. OR, MAY NOT LOAD CASSETTE AT ALL.

MODELS: FUNAI, SYMPHONIC, MAGNAVOX, PHILIPS, SYLVANIA, PHILCO, HITACHI, WHITE WESTINGHOUSE, SEARS: 1994-1997 MODELS

LOCATION/REF #	PART NUMBER	DESCRIPTION
D511	QPQSSLR938CV	CENTER LED EMITTER
Q503	ST-316R2-B / PT380F	END SENSOR
Q504	ST-316R2-B / PT380F	START SENSOR

SPECIAL INSTRUCTIONS:

- D511, Q503 & Q504 ARE LOCATED ON MAIN PC BOARD. (MAY HAVE DIFFERENT CIRCUIT DESIGNATIONS ON SOME MODELS)
- **NOTE: PC BOARD IS MARKED WITH ORIENTATION OF Q503 AND Q504. INSTALL WITH THE LONGER LEG AS SHOWN ON THE PC BOARD.**
- **NOTE POLARITY OF D511 (LED) AND INSTALL NEW LED IN THE SAME ORIENTATION.**
- **IF ANY OF THESE COMPONENTS ARE REVERSED, THE VCR WILL NOT OPERATE PROPERLY**
- SOME MODELS MAY HAVE VARIATIONS IN THE COMPONENT LOCATIONS.