



Kit Instructions

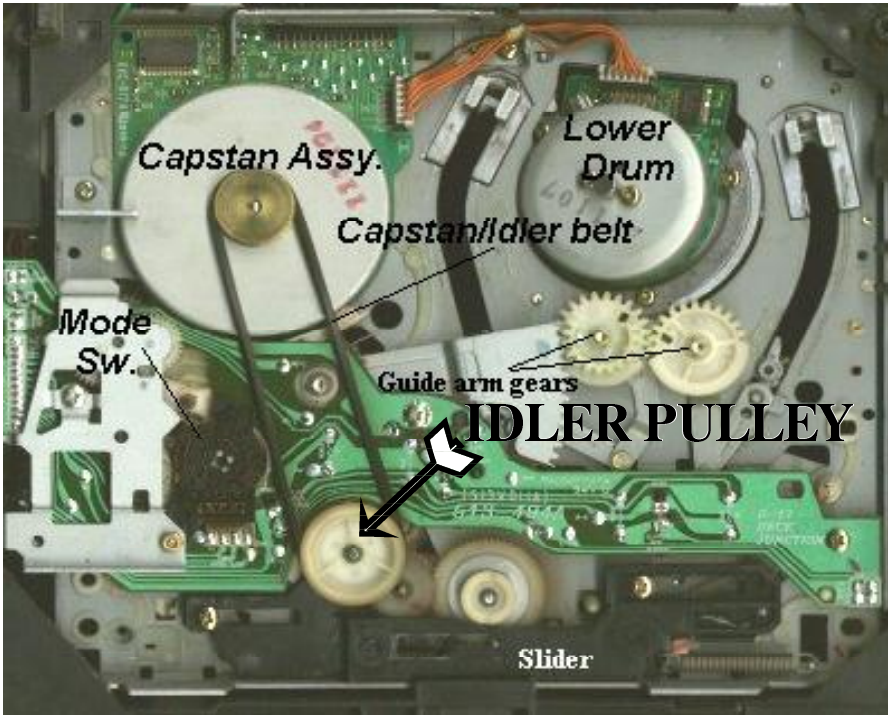


Remove top and bottom covers of VCR. On the bottom of the chassis, remove the capstan/idler belt. Next, remove the idler pulley by removing the small split washer on the idler pulley with a small screw driver, and lifting off the idler pulley. Be careful not to misplace the pulley or washer.

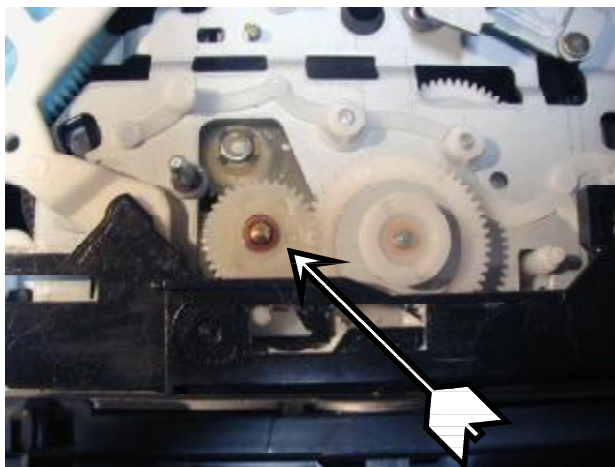

After removing the idler pulley, you will see a gear which was partially under the pulley (marked in the picture to the left). Remove the split washer from this gear, and lift off the gear. Don't misplace this gear, or the tiny split washer.

Gear

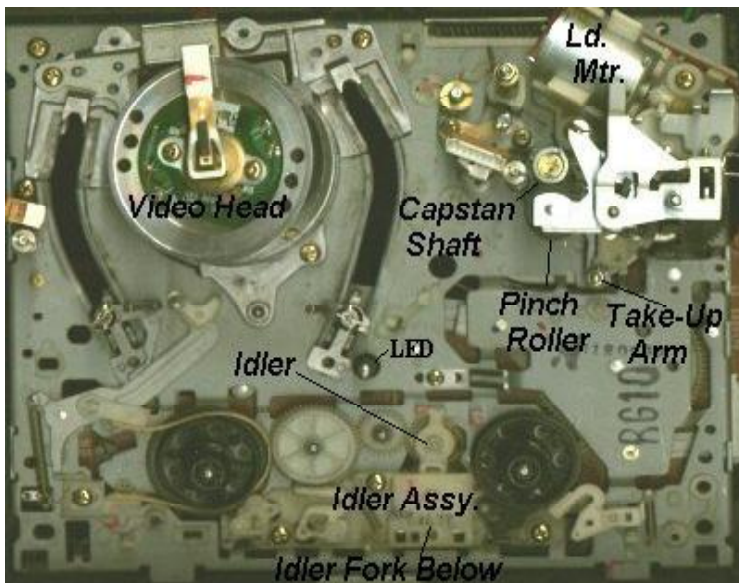

Now you can turn the VCR over to the top side, and remove the three screws holding the idler assembly to the chassis. Replace the idler assembly with the new one from the kit. Reinstall the original gear and the pulley you removed from the bottom of the unit in the steps above. Install the new belt in place of the old one.