



Fig. 31 Loading Motor Assembly Removal

To remove the loading motor assembly, refer to the above diagram carefully. You will need to remove a slit washer on the top side of the chassis, which is connected to a pinch roller connecting lever (see Fig D, above). Pull the loading motor assembly upward, in the direction of the arrow (A) to remove.

Upon reinstallation, be sure the marks on the loading gear (L) and (R) are positioned as shown in Fig B above, and the S/W slide position is placed at the end of the left side of the assembly. Also, note the position of the spring, shown in figure C. It's a good idea to look at the actual spring and remember its position, before removing the loading motor assembly.