


# Studio Sound Electronics

## VMK-027 Instructions for Toshiba VCRs

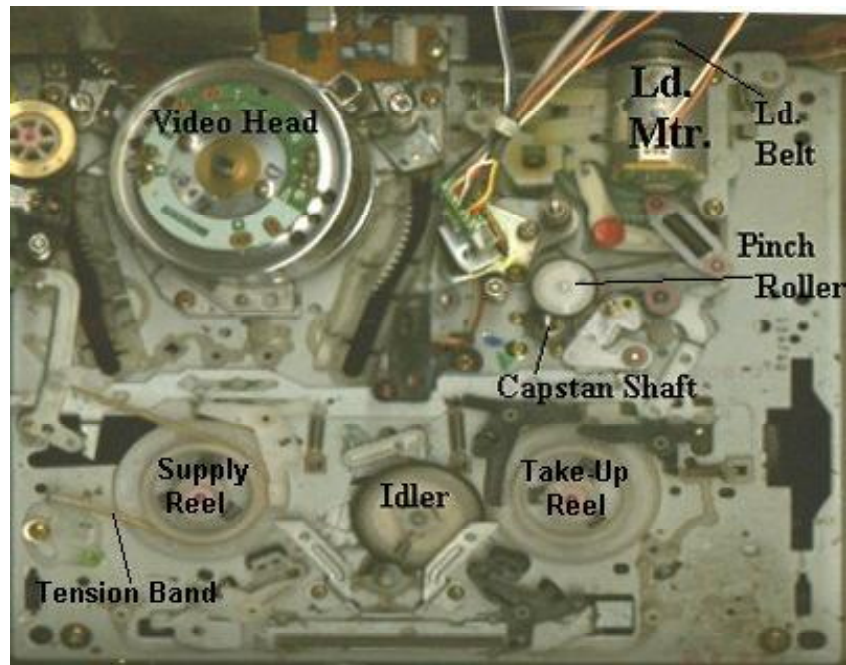

Remove top and bottom covers of the VCR. After removing the cassette housing, you will find the load belt is easy to change - note location in the above picture. To remove the pinch roller, grip the white cap on top with a mechanics pliers (not longnose!), coming straight down from the top (see picture to the right). Twist the cap back and forth gently with the pliers, while applying gentle upward pull. The cap is just a friction fit, and will come off. The pinch roller then lifts off. Install the new pinch roller and replace the cap. To replace the idler, first note the proper connection point for the spring attached to the idler. Now, remove the screws holding the metal wing bracket (circled in above picture). This drops the idler motor on the bottom side (see picture, lower right). The idler lifts out. Replace with the new idler, replace the wing bracket (lining up the screw holes in the idler motor). Replace the cassette housing, and test operation. Replace the top and bottom covers.

