



Kit Instructions

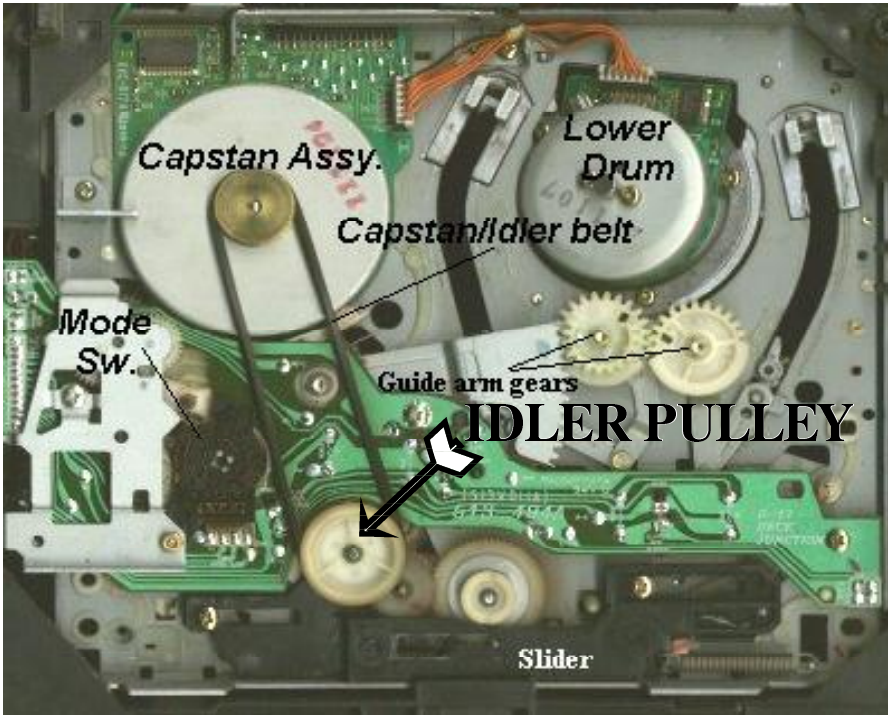


Remove top and bottom covers of VCR. On the bottom of the chassis, remove the capstan/idler belt. Next, remove the idler pulley by removing the small split washer on the idler pulley with a small screw driver, and lifting off the idler pulley. Be careful not to misplace the pulley or washer.

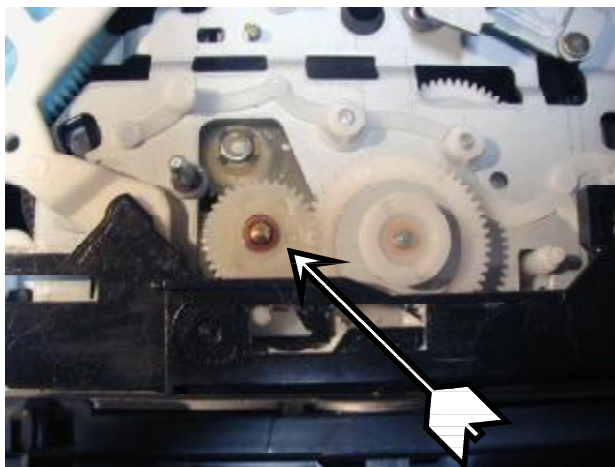

After removing the idler pulley, you will see a gear which was partially under the pulley (marked in the picture to the left). Remove the split washer from this gear, and lift off the gear. Don't misplace this gear, or the tiny split washer.

Gear

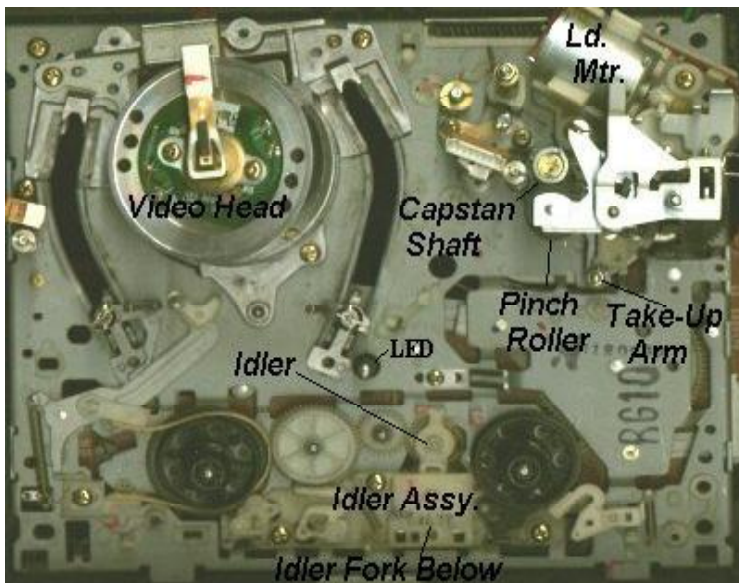

Now you can turn the VCR over to the top side, and remove the three screws holding the idler assembly to the chassis. Replace the idler assembly with the new one from the kit. Reinstall the original gear and the pulley you removed from the bottom of the unit in the steps above. Install the new belt in place of the old one.

Kit Instructions, Page 2



To change the pinch roller, remove the nut from the top of the plate which is on top of the pinchroller assembly. Lift off this plate, and remove the pinch roller assembly.



The pinch roller assembly is shown on the left. The gray cap which holds the roller in place is held on with a friction fit. Take a pair of mechanics pliers (not long nose pliers!) and gently grip this gray plastic cap. By gently twisting and pulling on the cap, it can be removed. Once the cap is removed, replace the old roller with the new one. Reinstall the plastic cap by pushing it into place. (Note the correct positioning of the cap in the picture.)

GRAY PLASTIC CAP

Reinstall the pinch roller assembly, and then replace the metal plate and the nut.